

LM

feel the  
difference

# LMProPower UltraLED



USER MANUAL

**This manual is valid for:**

LM-ProPower 100721741  
LM-ProPower 100731751  
LM-ProPower 100721741us  
LM-ProPower 100731751us  
LM-ProPower 100721741jp  
LM-ProPower 100731751jp

**Important!**

Read this manual carefully  
before using the product.

**How to read this manual**

Each chapter starts with a section with general instructions, which is followed by sections with additional information. First read the general section and then proceed to the section that applies to your product. If there are any questions regarding the contents of this manual, please contact LM-Instruments Oy.

**Manufacturer, Marketing and Sales**

LM-Instruments Oy  
PL 88 (Norrbyn rantatie 8)  
FI-21601 Parainen. Finland  
Telephone: +358 2 4546 400  
Fax: +358 2 4546 444  
E-mail: [info@lminstruments.com](mailto:info@lminstruments.com)  
Internet: [www.lminstruments.com](http://www.lminstruments.com)

**Copyright**

Copyright 2010 LM-Instruments Oy. All rights reserved. The contents of this manual may be changed without notice. No part of this manual may be reproduced in any form or by any means without permission in writing from LM-Instruments Oy.

Printed in Sweden, May 2011.

# Contents

<b>Safety</b> .....	<b>5</b>
<b>Consignes de securite (Canada)</b> .....	<b>7</b>
<b>1 Unpacking</b> .....	<b>9</b>
1.1 General content of delivery .....	9
1.2 Content of introkits .....	10
<b>2 Equipment description</b> .....	<b>11</b>
2.1 General description .....	11
2.2 Control panel.....	12
2.3 Foot control .....	13
2.4 Medicament bottle .....	14
2.5 Symbols on the equipment .....	15
<b>3 Installation</b> .....	<b>16</b>
3.1 General installation instructions .....	16
3.2 Version for tap water .....	16
3.3 General installation instructions, continued .....	17
<b>4 Operating instructions</b> .....	<b>18</b>
4.1 General .....	18
<b>5 Cleaning and maintenance</b> .....	<b>22</b>
5.1 General cleaning procedure .....	22
5.2 Recommended cleaning procedure .....	23
5.3 Maintenance .....	24
<b>6 Troubleshooting UltraLED</b> .....	<b>25</b>
<b>7 Technical data</b> .....	<b>28</b>
<b>8 Warranty and Declaration of conformity</b> .....	<b>30</b>
8.1 Warranty terms.....	30
8.2 Declaration of conformity .....	31
8.3 EMC - guidance .....	32



# Safety

## Intended use

This scaler is designed for dental purposes. It is designed for removal of tartar or calculus on teeth and other dental work where the ultrasonic vibration is beneficial. The unit should only be used by licensed dental professionals trained in the proper use of scaling devices. Do not use it for applications where it is not intended. If you are unsure about your application, please contact your local dealer or place of purchase.

## General requirements

Service of the product is only to be performed by authorized service personnel.

The product must be connected to electricity- and water supply meeting the requirements specified in the **Technical data** section page 28.

The product needs special precautions regarding EMC (Elektro Magnetic Compability) and needs to be installed and put into service according to the EMC information provided on page 33. Portable and mobile RF (Radio Frequency) communications equipment can affect the product.

## Contraindications

Do not use the scaler on patients with cardiac pacemakers. The scaler may disturb the function of the pacemaker.

## General precautions

- The product is not suitable for use in the presence of flammable gases.
- Only use the product in combination with LM-Instruments and Amdent scaler tips.
- If the handpiece tubing is damaged or worn-out, it must immediately be replaced to avoid exposing the user or the patient to electric hazard.
- Use the original packaging when returning equipment for service.

## Warnings


The product should not be used adjacent to or stacked with other equipment.

If adjacent or stacked use is necessary, the product should be observed to verify normal operation in the configuration in which it will be used.


## Safety notices in this manual



*Warning* indicates a potentially dangerous situation. Non-observance may lead to death or injury.

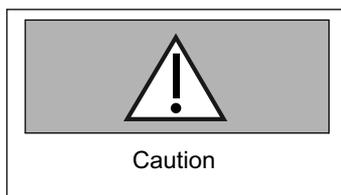

*Caution* indicates a potentially harmful situation. Non-observance may damage the equipment.

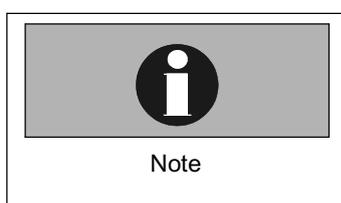

*Note* indicates a situation where special notice should be observed.

# Consigne de sécurité (Canada)

## Utilisation prévue

Cet appareil à ultrasons est destiné à des applications dentaires. Il est conçu pour éliminer le tartre ou les calculs des dents et pour toute autre application dentaire où les vibrations ultrasonores sont bénéfiques. Cet appareil doit être exclusivement manipulé par des professionnels dentaires diplômés ayant suivi une formation relative à l'utilisation correcte des dispositifs de détartrage. N'employez pas cet appareil pour des applications pour lesquelles il n'est pas conçu. Au cas où vous ne seriez pas sûr de son application, veuillez contacter votre distributeur local ou le point de vente.

## Conditions générales

Le service du produit doit être exécuté seulement par le personnel de service autorisé avec les outils et le matériel appropriés. Le produit doit être relié à l'alimentation de l'électricité et à l'alimentation en eau répondant aux exigences définies dans la section **Caractéristiques techniques** à la page 28.

Le produit exige des précautions spéciales concernant la CEM (Compatibilité Electromagnétique) et doit être installé et mis en service selon à la page 33. L'équipement de communication RF (Radio Fréquence) portable et mobile peut affecter le produit.

## Contres-indication

N'employez pas sur des patients avec les stimulateurs cardiaques. Le produit peut déranger la fonction du stimulateur.

## Précautions générales

- Le produit n'est pas approprié pour l'usage en présence d'un mélange anesthésique inflammable.
- Utilisez seulement le produit en combinaison avec des inserts de détartrage de LM-Instruments et Amdent.
- Si la tuyauterie de pièce à main est endommagée ou usée, elle doit immédiatement être substituée pour éviter d'exposer l'utilisateur ou le patient au risque électrique.
- Utilisez l'original emballage en renvoyant le matériel pour le service.


## Avertissement

Le produit ne doit pas être utilisé à proximité ou empilé avec d'autres équipements. Si l'usage adjacent ou empilé est nécessaire, le produit doit être surveillé pour une utilisation normale suivant la configuration dans laquelle il sera utilisé.


## Notifications de sûreté en ce manuel



“*Warning*” indique une situation probablement dangereuse. La inobservance peut mener à la mort ou des dommages.

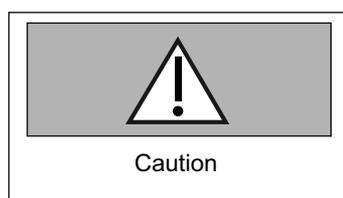

“*Caution*” indique une situation probablement nocive. La inobservance peut endommager le matériel.

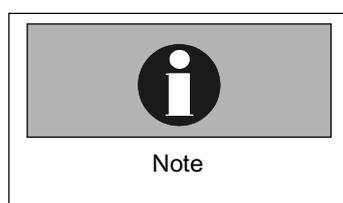

“*Note*” décrit si on observe la notification spéciale.

# 1 Unpacking




## Note

This chapter describes the components of the delivery and can be used as a check list when unpacking. Contact your place of purchase if anything is missing. For a description of the features of the equipment, read the Equipment description section on page 11.

Carefully unpack your LM-ProPower UltraLED unit and verify that all accessories and components are included according to the content lists below:

## 1.1 General content of delivery

1. LM-ProPower UltraLED unit
2. Scaler handpiece connected to unit
3. Scaler introkit (see section 1.2 )
4. 500 ml medicament bottle or water hose 6 mm (1/4")
5. Foot control
6. Foot control cable
7. Power cord
8. LM-ProPower Fixer

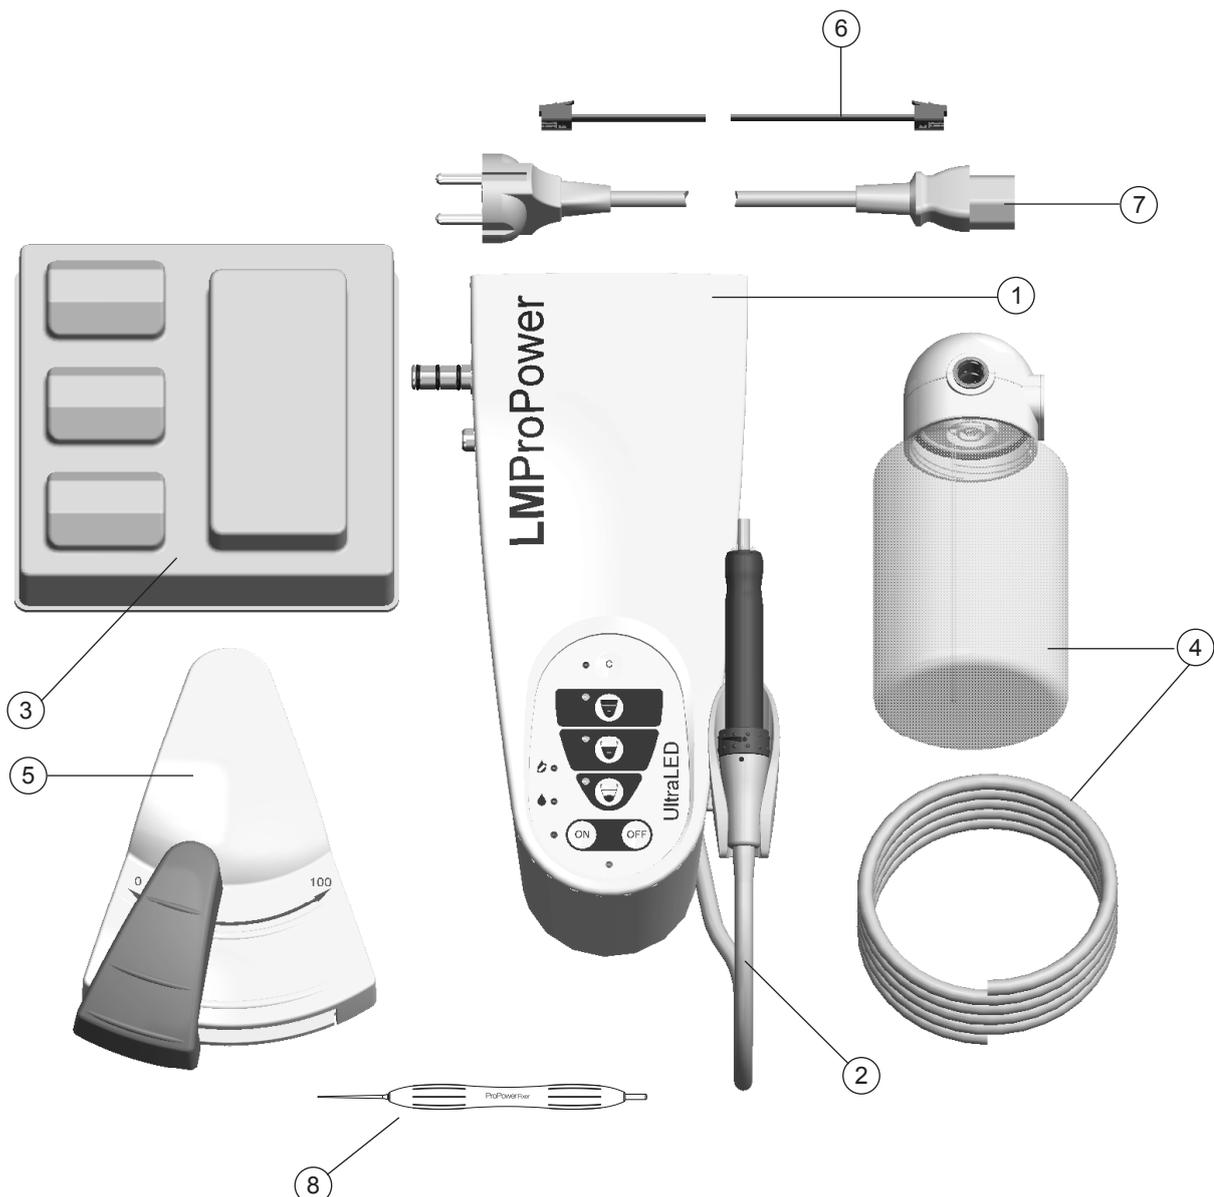

## **1.2 Content of introkits**

### **Content of UltraLED Scaler introkit**

- 3 x Scaler tips
- 3 x ErgoGrips
- 3 x Torque Wrenches
- 3 x Tip Check Cards

## 2 Equipment description


### 2.1 General description

LM-ProPower UltraLED is an effective piezoelectric scaler in a versatile and ergonomic appliance.


The device's LED lights, advanced electronics, quality, and high-durability LM-DuraGradeMAX tips enhance the execution of procedures which require great precision.

Ergonomically designed ErgoGrip handpieces with soft silicone handles give the user a comfortable, relaxed grip as well as an excellent feel.

LM-ProPower is highly adaptable to any procedure or user approach. It is not only an outstanding scaling and cleaning device, but it also brings power and versatility to endodontics, implantology, restorative treatments, minimally invasive treatments and apical surgery.

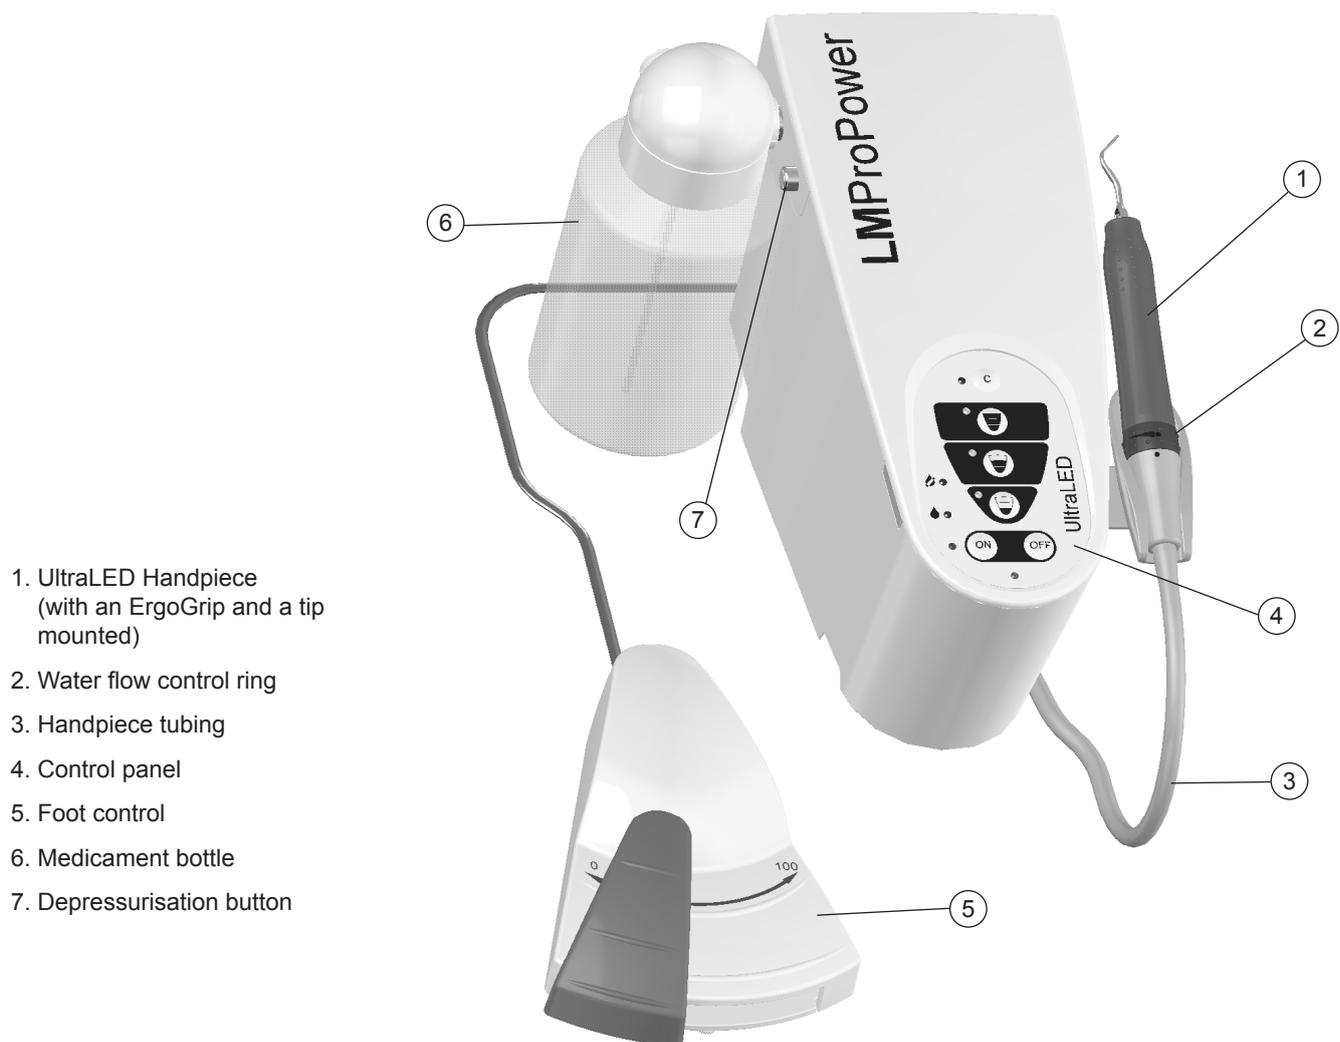


## Equipment description

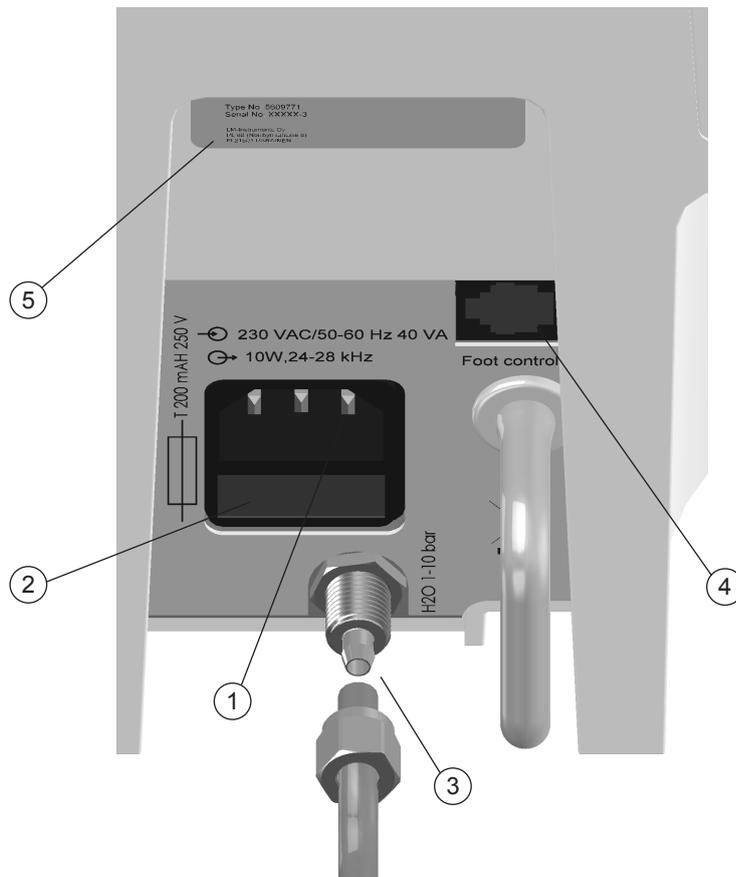

1. AC power input
2. Fuse holder
3. Water hose coupling (optional)
4. Foot control connection
5. Type plate

## 2.2 Control panel



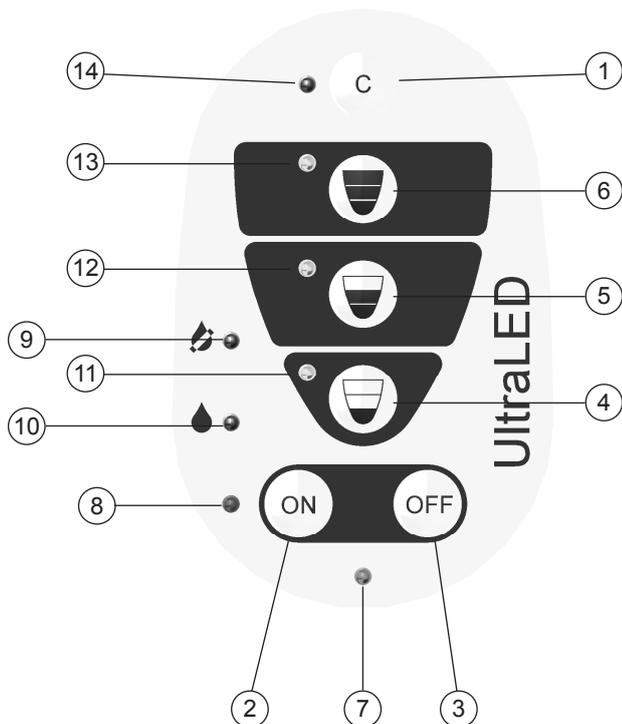


1. Cleaning key
2. POWER ON key
3. POWER OFF key
4. Working mode 1 key = 0 to 40% power
5. Working mode 2 key = 0 to 70% power
6. Working mode 3 key = 0 to 100% power
7. StandBy indicator
8. POWER ON indicator
9. Dry mode indicator
10. Irrigation mode indicator
11. Working mode 1 indicator
12. Working mode 2 indicator
13. Working mode 3 indicator
14. Cleaning mode indicator

## 2.3 Foot control



1. Connection for foot control cable
2. OFF position
3. ON position
4. Diagnostic function, turn LED light ON or OFF by a single-click on the pedal
5. Irrigation position
6. Zero power position
7. Maximum power position
8. Power regulation

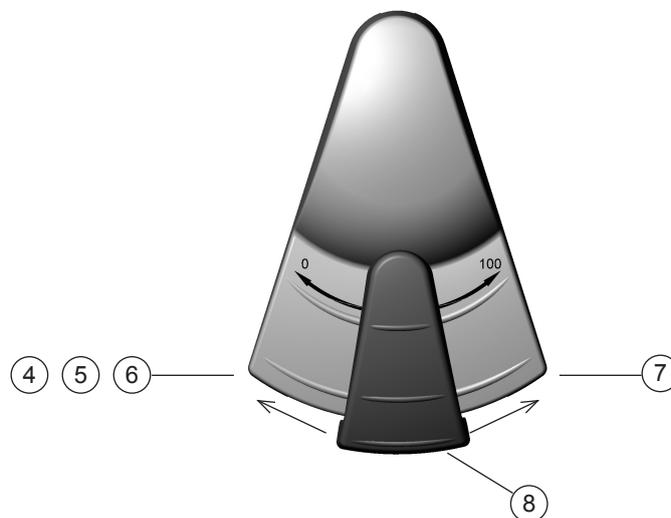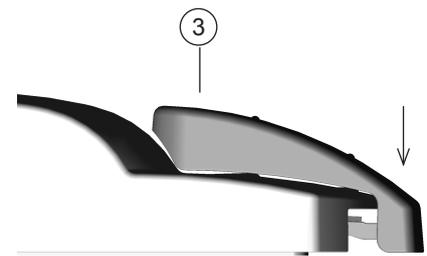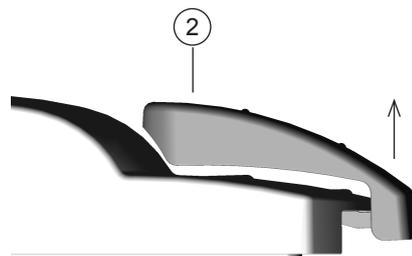


## 2.4 Medicament bottle (optional)

LM-ProPower has a medicament dispenser system, making the device independent of a fixed water supply connection. The medicament bottle can be used for either medicament solutions or ordinary clean water.

The unit contains an electrically driven air compressor. When operating the unit the compressed air forces the fluid from the bottle through the hose and to the handpiece and the tip/nozzle.

1. Medicament bottle
2. Bottle connector
3. Depressurisation button

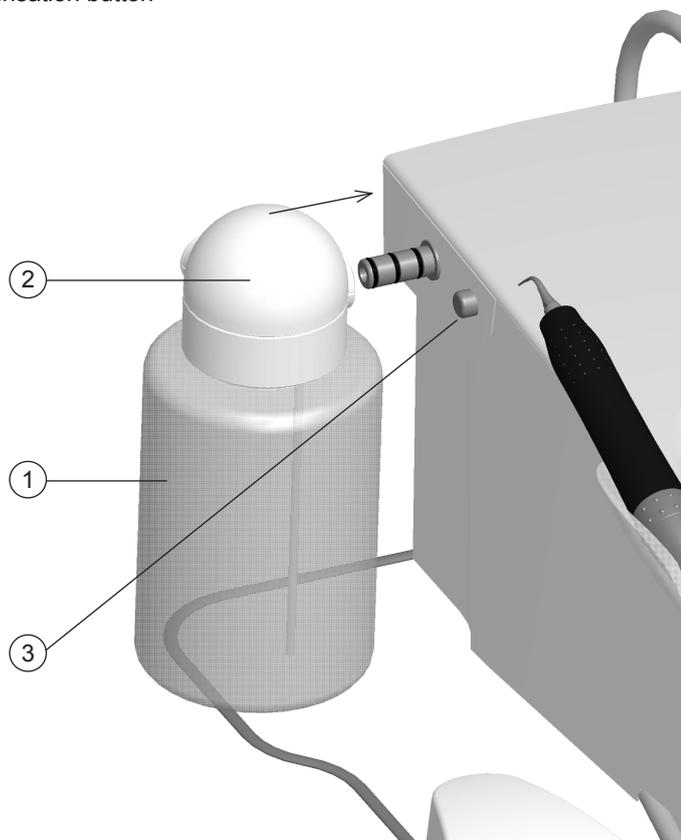

The LM-ProPower can be delivered either with the medicament dispenser system or with fixed water supply connection without the bottle and bottle connector.

## 2.5 Symbols on the equipment



Working mode 1 = 0 to 40% power



Working mode 2 = 0 to 70% power



Working mode 3 = 0 to 100% power



Irrigation mode



Dry mode



Automatic cleaning function



Power ON



Power OFF

### Scaler

Model LM-ProPower 100731751  
Type No. 900051  
Serial No. 1000043

Example of type plate. The type plate is placed on the back side of the scaler unit.



Medical electrical equipment classified by ETL with respect to electric shock, fire, mechanical, and other specified hazards in accordance with the Safety Standards ANSI/AAMI ES 60601-1 and CAN/CSA C22.2 No 60601-1:08



Caution



Consult accompanying documents.



Compliance label indicating compliance with the Medical Device Directive 93/42/EEC.

 
0537 is the ID-number of the Notified Body: VTT



Withstands autoclave temperature 135°C (275°F).



Type B applied part according to the degree of protection against electrical shock.



Fuse



Input



Output




Please do not throw the equipment into the domestic refuse. Please use the return and collection systems available in your country for the disposal of this product. The equipment can also be returned to the manufacturer for disposal.

## 3 Installation

### 3.1 General installation instructions

#### Checklist

- Position the unit horizontally with the handpiece in the holder and the hose hanging free.
- Position the unit where air is free to circulate on all sides and beneath it. Do not position the unit on a wall or next to a heat source.
- Avoid placing the unit in the immediate vicinity of sources of electromagnetic radiation, for example an electrosurgery equipment.
- Connect the foot control cable to the foot control and at the rear side of the unit.
- Mount the scaler tubing in the groove underneath the unit, as in picture.

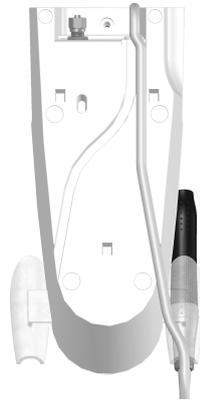

#### Caution

Do not place the unit on or next to a heat source. Excessive heat may damage the electronics.




#### Caution

Consult a qualified technician for connecting the scaler to the water supply.

### 3.2 Version for tap water (optional)

#### Connecting to the water supply

1. Verify that the water supply can be turned off.
2. Verify that the water pressure conforms to the data in the Technical data.
3. Verify that the water supply fulfills the medical demands of hygiene.
4. Unscrew the nut from the nipple and thread it on the hose.
5. Push the hose onto the coupling nipple.
6. Tighten the nut firmly and insure that the hose is securely attached to the unit.
7. Connect the other end of the hose to the water supply.

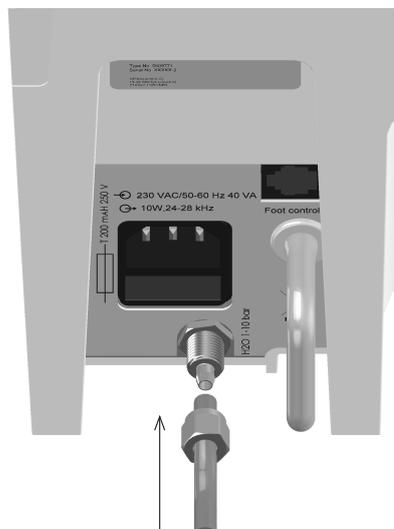

**WARNING**

The unit must be connected to an AC power outlet provided with a protective ground. USA and Canada: The power cord and plug must be classified as "Hospital-Grade".

### 3.3 General installation instructions, continued

- Verify that the voltage rating on the rear side match the voltage of the AC power outlet.
- Verify that the AC power outlet is provided with a protective ground.
- Connect the power cord to the unit and the AC power outlet. All indicator lamps will illuminate for a short period during a self check of the unit.
- The unit is standby when the green indicator lamp is illuminated.

## 4 Operating instructions

### Preparations (bottle version)

1. Fill the medicament bottle with water or medicament solution according to the Medicaments that can be used, listed on page 29.
2. Screw the bottle connector onto the bottle and push it onto the connector. See picture in section 2.4
3. Check that the power cord is connected and the unit is in stand-by mode, the green indicator lamp is illuminated.

### 4.1 General

1. Gently slide the ErgoGrip on to the scaler handpiece.



2. Carefully place the tip in the torque wrench.



3. Use the torque wrench and screw the tip clockwise on to the scaler handpiece. Tighten until resistance and the torque wrench slides. The torque wrench prevents the tip from being overtightened.



#### WARNING

A tip that is bent, altered, worn more than 2 mm will loose performance and must be exchanged. Prolonged use may cause tip breakage and injury to the patient.

The operator should be aware of that ultrasonic instruments with small diameters are subject to breakage at any time. If not used correctly or with too much power or force the instrument **WILL** break.

Do not use nickel-titanium files, since they easily break at high frequencies.

**Caution**

Without cooling fluid, the maximum operating time, for the scaler handpiece, is 2 minutes followed by a cooling-down period of 8 minutes. Operating without cooling fluid for more than 2 minutes may cause overheating of the scaler handpiece.

After above cycle has been repeated 2 times, the scaler handpiece has to cool down for at least 60 minutes.

**WARNING**

Remember to choose the right working mode if changing scaler tip during the treatment

New tips are not sterile upon delivery. Sterilize before use according to the clinic's routines.

Keep the patient's lips, cheeks, and tongue out of the way of the activated tip, since contact may cause burns because of friction heat.

**Note**


At low power settings there will be no spray.

Increase the water flow if the handpiece feels too warm.

4. Turn on the UltraLED scaler by ON key on the keyboard. The blue indicator lamp illuminates and the scaler is activated.
5. The indicators next to the working modes are flashing to remind that a working mode has to be selected. If several blue indicators are flashing instead, check that the scaler hand piece is connected. If the problem remains concern the trouble shooting section. Check the recommended working mode that is marked on the tip and choose the working mode by pressing the corresponding working mode key on the keyboard.



6. A second press of the "ON" key activates the dry mode for scaling without water/medicament.
7. A third press of the "ON" key activates the irrigation mode. The irrigation mode can also be activated in the scaling mode by pressing down the foot control in the leftmost position.
8. By pressing the "ON" key repeatedly, it will toggle between normal scaling, dry and irrigation mode.
9. Keep the handpiece over the cuspidor bowl and depress the foot control in the leftmost position and adjust the water flow with the ring on the handpiece until the water is dripping from handpiece as in picture below. Recommended flow: 20 ml/min.

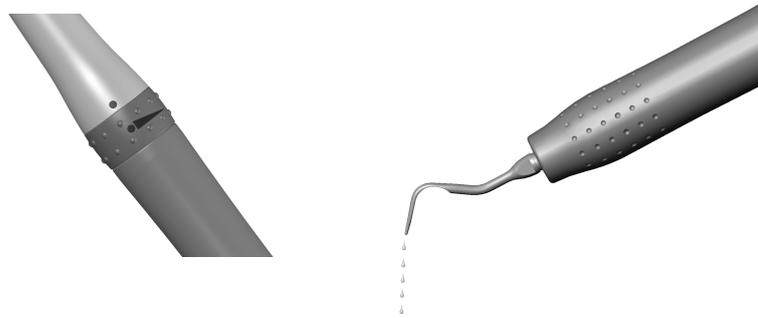


10. Keep the patient's lips, cheeks and tongue out of the way of the tip and perform treatment according to "How to use the scaler" section on next page.

## How to use the UltraLED scaler


The side of the tip-end shall be applied to the tooth so that the movement of the tip is parallel to the surface of the tooth. The first 2 mm of the tip are the most efficient! Place the tip on the tooth surface before activating the foot control. The power is regulated with the foot control from 0 to 100% within each working mode.

Normal scaling rarely requires more than 50% power level of each working mode. However, hard to remove calculus might require a higher power setting.

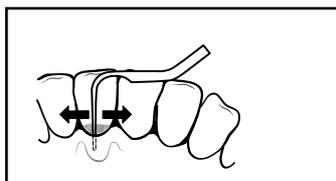

Ensure that contact between the tip and the tooth surface is maintained during scaling. Keep moving the tip slowly back and forth and let the instrument do the work. Use short and long strokes so that the whole surface of each tooth is scaled.

The tip is normally aimed towards the toothpocket.

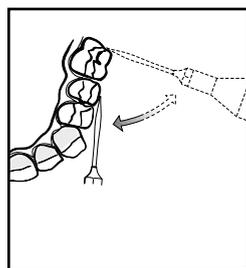

To keep the tip working parallel to the surface of each tooth, it is important to follow the anatomy of the tooth.

With the correct power setting, appropriate pressure against the tooth (approximately 20 grams but not exceeding 50) and the tip operating parallel to the surface, treatment will be gentle, quiet and efficient.

If, during the treatment, a squeaking sound is heard (loud and dominating), the pressure against the tooth might be too low or the tip not parallel to the surface of the tooth.

**Note**

Always set the water flow to fully open before running the cleaning cycle (dots in line, see picture).




## After treatment

1. Run the automatic cleaning function, see instructions on page 22.
2. After the cleaning cycle is finished, screw off the tip, counter clockwise, with the torque wrench.

**Caution**

Before cleaning and sterilizing; the handpiece water control ring must be set to fully open (dots in line, see picture)

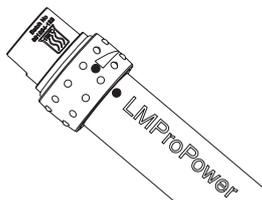

3. Squeeze the ErgoGrip gently at the top and at the same time slide it off the handpiece. Do not squeeze too hard at the ErgoGrip as this can make the removal difficult.
4. Press the depressurization button (bottle version).
5. Pull the medicament bottle from the unit (bottle version).
6. Clean and sterilize the equipment/components according to the Cleaning and maintenance section on page 22-23.

# 5 Cleaning and maintenance

## 5.1 General cleaning procedures

### *Automatic cleaning function*

1. Make sure the water control is fully open. Place the scaler handpiece over the bowl and start the cleaning cycle by pressing the cleaning key “C”.
2. The cleaning cycle starts and stops automatically after 80 seconds.

### *Cleaning of the equipment/components*

Wipe off with a soft cloth and use a surface disinfectant suitable for hard plastics.

Cover and control panel	
-------------------------	--

Wash at max 65°C (149°F)

Medicament bottle	
Cap for medicament bottle	



**Note**

Always set the water flow to fully open before running the cleaning cycle (dots in line, see picture).



Autoclave in steam at max 135°C (275°F) or wash at max 95°C (203°F)




**Note**

Autoclaving the handpiece regularly may shorten the life time of the scaler handpiece. Therefore we recommend to just autoclave the ErgoGrip and the scaler tip after each patient.



**Caution**

Before cleaning and sterilizing; the handpiece water control ring must be set to fully open (dots in line, see picture)

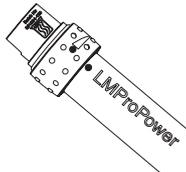

**Note**

Always set the water flow to fully open before running the cleaning cycle (dots in line, see picture).



**Caution**

Do not sterilize any scaler accessories using dry heat or chemical autoclaves. This may damage the material.

Scaler tips	
Torque wrenches	
LM-ErgoGrip LED	
LM-ErgoGrip Focus LED	
LM-ProPower scaler handpiece	

## 5.2 Recommended cleaning procedure

### Beginning of the day

Run the automatic cleaning cycle with clean water. See instructions on page 22.

### After each treatment

- Run the automatic cleaning cycle with clean water. See instructions on page 22.
- Wipe off the cover, control panel, handpiece and the hose with a soft cloth. Use a surface disinfectant suitable for hard plastics.
- Wash the ErgoGrip, the tip and possibly the scaler handpiece and autoclave according to the clinic's routines.

### End of the day

- Run the automatic cleaning cycle with clean water. See instructions on page 22.
- Remove and wash medicament bottle and bottle cap at a maximum temperature of 65°C / 149°F (bottle version).

**Weekly (bottle version)**

- Run the automatic cleaning cycle with an anti-microbial cleaning agent solution in the bottle. See instructions on page 22. We recommend to use a separate bottle for the cleaning agent solution. Concerning exposure times of cleaning agent, follow instructions given by manufacturer.
- Before patient treatment; to rinse the lines from cleaning agent solution put clean water in the bottle and run the automatic cleaning cycle until clean water comes out of the handpieces.

**5.3 Maintenance**

**Power cord**

Inspect the power cord, cables and the handpiece hose daily to insure that the equipment is in good condition without mechanical damage.

**O-rings (bottle connector)**


Lubricate the O-rings regularly with a glycerine based, water soluble lubricant. Vaseline may also be used, but it may shorten the durability time of the O-rings.

**Tips**

When a tip is bent, altered, or worn more than 2 mm it will loose performance and must be exchanged. Check the tip length weekly by comparing the tip to a tip check card.

**Exchanging fuses**

1. Disconnect the power cord from the AC power outlet and the unit.
2. Open the fuse holder on the rear side of the unit.

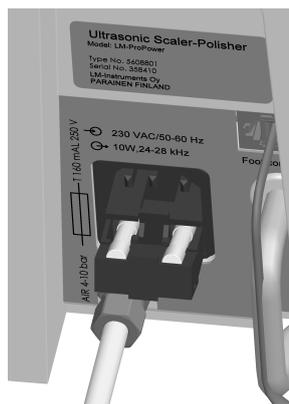

3. Inspect the fuses for damages. Replace damaged fuses with new ones. Verify the fuse specifications according to the Technical data section on page 28.
4. Close the fuse holder.



**Caution**

A petroleum based lubricant on the o-rings may shorten their durability time.



**WARNING**

A tip that is bent, altered, scratched or worn more than 2 mm will loose performance and must be exchanged. Prolonged use may cause tip breakage and injury to the patient. The operator should be aware of that ultrasonic instruments with small diameters are subject to breakage at any time. If not used correctly or with too much power or force the instrument WILL break.

## 6 Troubleshooting UltraLED

Type of problem	Please see
<b>A.</b> Unit is not responding and no lights are lit on the control panel	Page 25
<b>B.</b> Lights are flashing on the control panel	Page 26
<b>C.</b> No tip vibration	Page 26
<b>D.</b> Weak tip vibration	Page 26
<b>E.</b> Insufficient or no water flow	Page 27
<b>F.</b> Tip does not fit smoothly onto the handpiece	Page 27
<b>G.</b> Difficulty to remove the ErgoGrip	Page 27
<b>H.</b> Handpiece is overheated	Page 27
<b>I.</b> Weak or no LED light	Page 27

### **A. Unit is not responding and no lights are lit on the control panel**

1. Check that the power cord is connected properly and double check the voltage (120V/230V).
2. Check the fuse and replace if necessary. See Maintenance-section of the user guide.
3. Check that the wall outlet and the fuse panel of your clinic are OK.
4. If the problem still remains – contact your dealer for support and indicate Error Code E-X02.

## B. Lights are flashing on the control panel

Four blue lights on the control panel are flashing simultaneously.	Check that the foot control cable is connected at both ends and is not damaged.
The blue light next to the ON-key is flashing alternately with three other blue lights on the control panel.	Check that the scaler handpiece is properly connected.
Three yellow lights are flashing in sequence.	The Working Mode has not been selected. Select the working mode by pressing one of the keys next to the yellow lights.
The light next to the C-key is flashing.	The cleaning function has been activated. Wait until the cleaning process has finished and the light stops flashing.

## C. No tip vibration

1. Check that the tip is firmly tightened. Preferably use a torque wrench and tighten clockwise until the torque wrench slides. (The torque wrench prevents the tip from being over-tightened.)
2. Check that the green light below the keys on the control panel is lit. If it is not lit, please see Section A on page 25.
3. Check that the device has been turned on by pressing the ON-key and that the blue light next to the ON-key is lit.
4. Check that the Working Mode has been selected by pressing one of the Working Mode keys and that one of the yellow lights on the control panel is lit.
5. If you have an additional handpiece, try replacing the handpiece.
6. If you have an additional foot control cable, try replacing the foot control cable.
7. If you have an additional foot control, try replacing the foot control.
8. If the problem still remains – contact your dealer for support and indicate Error Code E S01.

## D. Weak tip vibration

1. Check that the tip is firmly tightened. Preferably use a torque wrench and tighten clockwise until the torque wrench slides. (The torque wrench prevents the tip from being over-tightened.)
2. Check that the tip is not worn out. Use a tip check card to evaluate wearing or try an unused tip. Use original LM-Instruments tips for reliable performance.
3. If you have an additional handpiece, try replacing the handpiece.
4. If the problem still remains – contact your dealer for support and indicate Error Code E-S02.

## **E. Insufficient or no water flow when foot switch is activated**

1. If the unit are equipped with a water bottle: Check that the medicament/water bottle is properly connected i.e. the cap is tightened and pushed in all the way onto the connector. Check that the o-rings on cap and connector are in good condition. Replace o-rings if worn. O-rings can be lubricated with a glycerine based lubricant (or vaseline).
2. If the unit are connected with tap water: Check that the tap water hose is properly connected to the back of the device and that the tap water system is OK (tap/valve is open and possible filter is OK).
3. Check that dry mode is not activated i.e. that the blue light next to the crossed-out water drop is not lit. If it is lit, press the ON-key.
4. Adjust the water control ring on the handpiece to fully open (dots aligned).
5. Try with another tip.
6. Use the LM-ProPower Fixer to check that the water hose inside the handpiece has not stuck in the autoclave. Insert the Fixer carefully into the handpiece from the hose connector side. (To avoid the hose getting stuck, the water adjustment on the handpiece should be set to fully open before sterilization in autoclave.)
7. If the problem still remains – contact your dealer for support and indicate Error Code E-S04.

## **F. Tip does not fit smoothly onto the handpiece**

1. Clean handpiece threads with compressed air and try with a new tip.
2. If the problem still remains, the threads of the handpiece may be damaged and the handpiece needs to be replaced. Contact your dealer and indicate Error Code E-S06.

## **G. Difficulty to remove the ErgoGrip from the handpiece**

1. Grab the ErgoGrip gently near the lens and at the same time twist and slide it off the handpiece.
2. If the problem still remains, replace the ErgoGrip.

## **H. Handpiece is overheated during use**

1. Check that the fluid flow is sufficient (at least 20 ml/min).
2. If the problem still remains, replace the handpiece and contact your dealer.

## **I. Weak or no LED light.**

1. Note that there are two versions of the ErgoGrip with different lenses and light pattern and intensity: “ErgoGrip LED” and “ErgoGrip FocusLED”.
2. Check that lens in the ErgoGrip is clear and clean. Clean or replace if necessary.
3. If you have an additional handpiece, try replacing the handpiece.
4. If the problem still remains – contact your dealer for support and indicate Error Code E-S03.

## 7 Technical data

Manufacturer	LM-Instruments Oy PL 88 (Norrbyn rantatie 8) FI-21601 Parainen, FINLAND
Model	LM-ProPower UltraLED
Classification	EN60601-1: Class 1, Type B 93/42 EU: Medical products, class IIa
L x W x H	270 x 140 x 165 mm (without bottle)
Weight	2900 g
Voltage	100 Vac, 50-60 Hz 115 Vac, 50-60 Hz 230 Vac, 50-60 Hz
Primary fuse	T500 mA, 250 V, Ø5x20 mm (100 Vac) T400 mA, 250 V, Ø5x20 mm (115 Vac) T200 mA, 250 V, Ø5x20 mm (230 Vac)
Power cord	Separate with protective earth plug
Power consumption	Max. 40 VA
Scaler power consumption	Max. 24 VA
Scaler power output	Max. 10 W (24 kHz - 28 kHz, automatic tuning)
Ambient temperature	Transport and storage -40°C to 70°C (-40°F to 158°F)
	Operation 10°C to 40°C (50°F to 104°F)
Relative humidity	Transport and storage 10% to 100%
	Operation 10% to 95%
Water supply pressure (version conn. to tap water)	1 - 10 bar (0,1–1,0 MPa, 14,5–145 PSI)
Water consumption	10 - 50 ml/min
Bottle volume (bottle version)	500 ml

**Installation and service of the product is only to be performed by authorized service personnel by the manufacturer.**

**WARNING**

Immediately after using any kind of medicament in the medicament bottle, run the automatic cleaning cycle with clean water in the medicament bottle for both the scaler and the polisher until clean water comes out of the handpieces.

**Medicaments that can be used**

- Clean water
- Cetylpyridinium chloride
- Clorhexidine
- Essential oils
- Hydrogen peroxide, 3% USP
- Povidine iodine, 10% solution
- Saline solution
- Sangurinara extract
- Sodium hypochlorite 1% solution

# 8 Warranty and Declaration of conformity

## 8.1 Warranty Terms

The following warranty terms apply to the sale of LM-Instrument Oy's products (hereinafter "Products") to a purchasing company or individual by LM-Instruments Oy (hereinafter "Manufacturer").

Manufacturer hereby warrants that the Products will be free from defects arising from faulty materials or workmanship for a period of twenty four (24) months from the date of purchase by a customer from Manufacturer's authorized dealer (hereinafter "Authorized Dealer"). The warranty period is exceptionally three (3) months for products with a life inherently shorter than 24 months due to normal wear and tear, for example tips of ultrasonic scalers, tips of endodontic files.

This warranty shall not apply to Products or parts thereof; which have been subject to abuse, misuse, negligence or accident or are not connected to proper power supply; to which any modification, alteration or attachment has been made without written consent of the Manufacturer; or which are installed or operated violating instructions for installation, use and maintenance; which are normally consumed in operation.

The sole and exclusive remedy under this warranty shall be limited to correct or circumvent the errors or to repair or replacement of defective parts of Products by the Manufacturer, EXW Manufacturer's factory, providing that a written claim of the defect is sent to the Manufacturer within the warranty period and the original part is returned to Manufacturer's factory by the Authorized Dealer, and Manufacturer's inspection establishes the existence of such a defect.

The customer must contact the Authorized Dealer from whom the products were purchased to request repair or replacement under this warranty and a written claim of the defects and send the original Product the Authorized Dealer.

This warranty is void if service or repair is performed by persons not authorized by the manufacturer.

Any Products not manufactured by the Manufacturer, carries only such warranty, if any, as given by any manufacturer thereof.

This warranty is the Manufacturer's only warranty in respect of the Products and the Manufacturer disclaims all other warranties, whether of merchantability, fitness for particular purpose or otherwise, guarantees and liabilities, express or implied, arising by law or otherwise. In no event shall the Manufacturer be liable for any general, consequential or incidental damages, loss of use or loss of profits by reason of the manufacturer's negligence or otherwise in connection with the sale, delivery, installation, repair or use of the Products.

The Manufacturer shall have no liability whatsoever to the Authorized Dealer or customer or any other person for or on account of any injury, loss or damage of any kind or nature, sustained by, or any damages assessed or asserted against, or any other liability incurred by or imposed upon the handling, use, operation, maintenance or repairs of Products by anyone other than the Manufacturer. This exclusion of liability does not apply pursuant to the laws on product liability in case of personal injury and property damage to privately used objects resulting from the Products.

**WARNING**

No modification of this  
equipment is allowed.

## 8.2 Declaration of conformity

The manufacturer hereby declares that the  
LM-ProPower UltraLED unit  
Class I, type B according to EN60601-1 equipped with original acces-  
sories conforms to the essential requirements of the Medical Device  
Directive 93/42/EEC with reference to the following harmonized  
standards:

IEC 60601-1, Third edition 2005

EN 60601-1: 2006

Classification: Medical products, Class IIa:

**CE**<sub>0537</sub>

## 8.3 EMC - Guidance and manufacturer's declaration

Guidance and manufacturer's declaration - electromagnetic emissions		
The LM-ProPower is intended for use in the electromagnetic environment specified below. The customer or the user of the LM-ProPower should assure that it is used in such an environment.		
Emission test	Compliance	Electromagnetic environment - guidance
RF emissions CISPR 11	Group 1	The LM-ProPower is suitable for use in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
RF emissions CISPR 11	Class B	
Harmonic emissions IEC 61000-3-2	Not applicable	
Voltage fluctuations/ flicker emissions IEC 61000-3-3	Not applicable	

Guidance and manufacturer's declaration - electromagnetic immunity			
The LM-ProPower is intended for use in the electromagnetic environment specified below. The customer or the user of the LM-ProPower should assure that it is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Electrostatic discharge (ESD) IEC 61000-4-2	±6 kV contact ±8 kV air	±6 kV contact ±8 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.
Electrical fast transient/burst IEC 61000-4-4	±2 kV for power supply lines ±1 kV for input/output lines	±2 kV for power supply lines ±1 kV for input/output lines	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±1 kV differential mode ±2 kV common mode	±1 kV differential mode ±2 kV common mode	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	<5 % $U_T$ (>95 % dip in $U_T$ ) for 0,5 cycle  40 % $U_T$ (60 % dip in $U_T$ ) for 5 cycles  70 % $U_T$ (30 % dip in $U_T$ ) for 25 cycles  <5 % $U_T$ (>95 % dip in $U_T$ ) for 5 sec	<5 % $U_T$ (>95 % dip in $U_T$ ) for 0,5 cycle  40 % $U_T$ (60 % dip in $U_T$ ) for 5 cycles  70 % $U_T$ (30 % dip in $U_T$ ) for 25 cycles  <5 % $U_T$ (>95 % dip in $U_T$ ) for 5 sec	Mains power quality should be that of a typical commercial or hospital environment. If the user of the LM-ProPower requires continued operation during power mains i interruption, it is recommended that the LM-ProPower be powered from an uninterruptible power supply or battery.
Power frequency (50/60 Hz) magnetic field IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.
NOTE $U_T$ is the a.c. mains voltage prior to application of the test level.			

<b>Guidance and manufacturer's declaration - electromagnetic immunity</b>			
The LM-ProPower is intended for use in the electromagnetic environment specified below. The customer or the user of the LM-ProPower should assure that it is used in such an environment.			
<b>Immunity test</b>	<b>IEC 60601 test level</b>	<b>Compliance level</b>	<b>Electromagnetic environment - guidance</b>
<p>Conducted RF IEC 61000-4-6</p> <p>Radiated RF IEC 61000-4-3</p>	<p>3 Vrms 150 kHz to 80 MHz</p> <p>3 V/m 80 MHz to 2,5 GHz</p>	<p>3 V</p> <p>3 V/m</p>	<p>Portable and mobile RF communications equipment should be used no closer to any part of the LM-ProPower including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.</p> <p><b>Recommended separation distance</b></p> <p><math>d = 1,2\sqrt{P}</math></p> <p><math>d = 1,2\sqrt{P}</math> 80 MHz to 800 MHz</p> <p><math>d = 2,3\sqrt{P}</math> 800 MHz to 2,5 GHz</p> <p>were <math>P</math> is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and <math>d</math> is the recommended separation distance in metres (m).</p> <p>Field strengths from fixed RF transmitters as determined by an electromagnetic site survey,<sup>a</sup> should be less than the compliance level in each frequency range.<sup>b</sup></p> <p>Interference may occur in the vicinity of equipment marked with the following symbol:</p> 
NOTE 1 At 80 MHz and 800 MHz, the higher frequency range applies.			
NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.			
<p><sup>a</sup> Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the LM-ProPower is used exceeds the applicable RF compliance level above, the LM-ProPower should be observed to verify normal operation. If abnormal performance is observed additional measures may be necessary, such as reorienting or relocating the LM-ProPower.</p> <p><sup>b</sup> Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3 V/m.</p>			

Recommended separation distances between portable and mobile RF communications equipment and the LM-ProPower			
The LM-ProPower is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the equipment can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the LM-ProPower as recommended below, according to the maximum output power of the communications equipment.			
Rated maximum output power of transmitter W	Separation distance according to frequency of transmitter m		
	150 kHz to 80 MHz $d = 1,2\sqrt{P}$	80 MHz to 800 MHz $d = 1,2\sqrt{P}$	800 MHz to 2,5 GHz $d = 2,3\sqrt{P}$
0,01	0,12	0,12	0,23
0,1	0,38	0,38	0,73
1	1,2	1,2	2,3
10	3,8	3,8	7,3
100	12	12	23
For transmitters rated at a maximum output power not listed above, the recommended separation distance $d$ in metres (m) can be estimated using the equation applicable to the frequency of the transmitter, where $P$ is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.			
NOTE 1 At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.			
NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.			



**LM-Instruments Oy**  
PL 88 (Norrbyn rantatie 8)  
FI-21601 Parainen, Finland  
Tel: +358 2 4546 400  
Fax: +358 2 4546 444  
E-mail: [info@lminstruments.com](mailto:info@lminstruments.com)  
Internet: [www.lminstruments.com](http://www.lminstruments.com)